 


QUICK START GUIDE

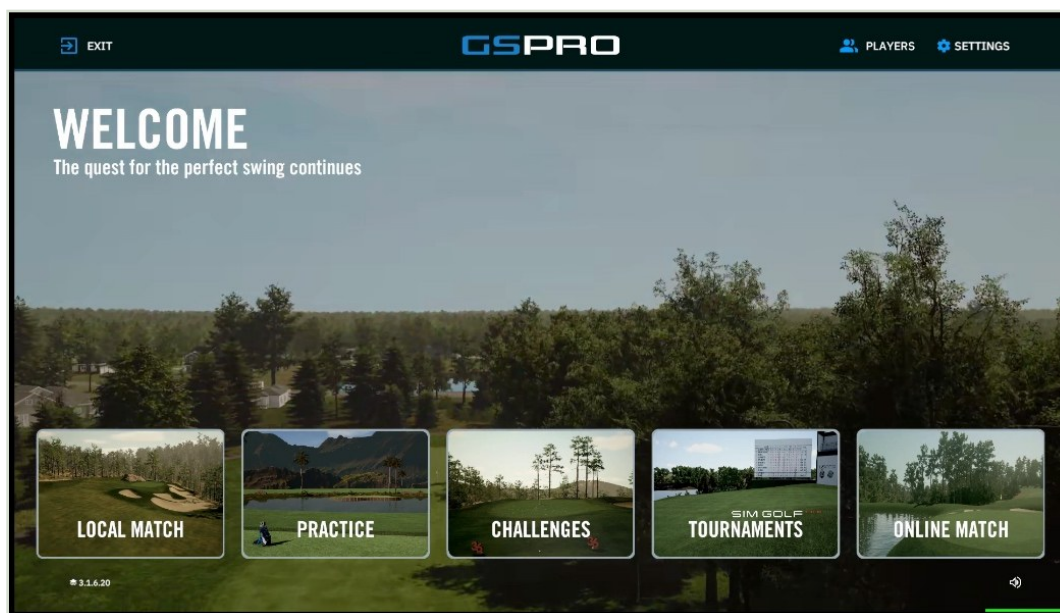


Simulator Startup Steps	2
User Interface (GSPRO Main Menu)	3
Game Modes – Practice	4
Practice Range	4–5
On Course Practice	6
Game Mode – Local Match	7
Choosing a Course and Filters	7–8
Adding Players	9
Game Settings	10
Ball Ready Strike Zone	11
Exiting Your Round	12
Keyboard Shortcuts	13
Shortcuts by Category	14

Most often GSPro is ready to go when you arrive. If not follow these steps:



Simulator Startup Steps

Double tap the touchscreen to activate the system > It can take up to 20 seconds for both the screen and projector to light up.

 - 1 Double tap the Uneekor icon in the left corner.**
Wait for the Uneekor Launcher to load.

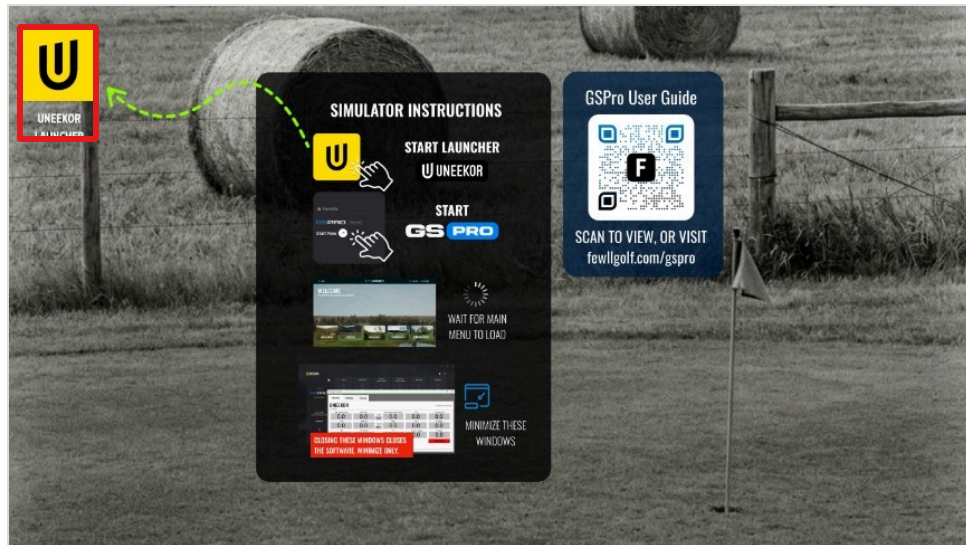

- 2 Tap GSPro Start Now**
Wait for GSPro to load. This can take a minute.

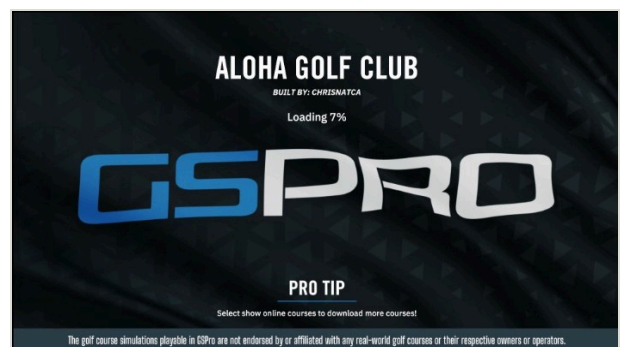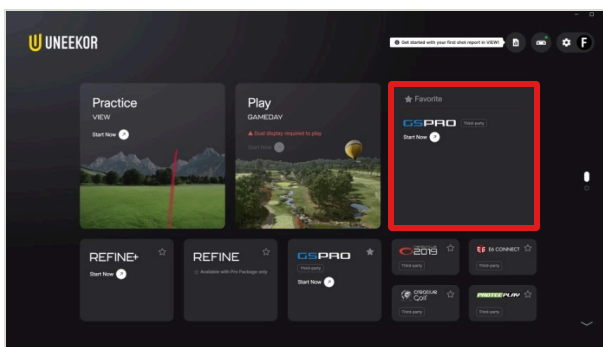



Simulator Startup Steps

GSPro connects to Uneekor through Third Party Connector. Once connected two windows will open as GSPro is loading. The data shown in these windows is replicated on your game play screen, do not close them.

3

Closing These Windows Closes the Software


Minimize manually, or tap the GSPro main menu to shrink.

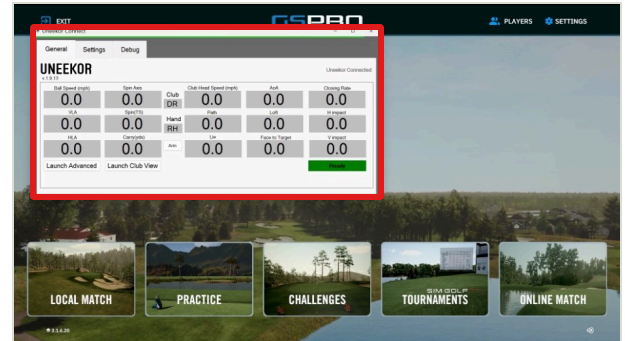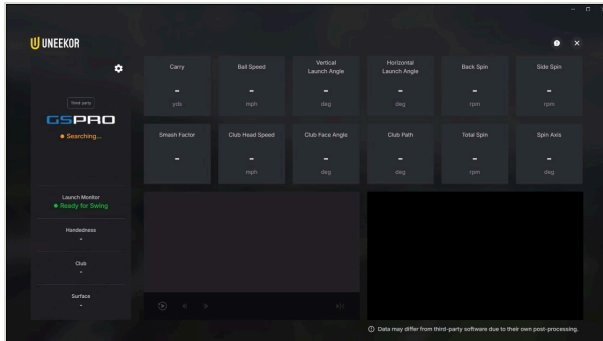

4

GSPro Main Menu

This is your user interface.

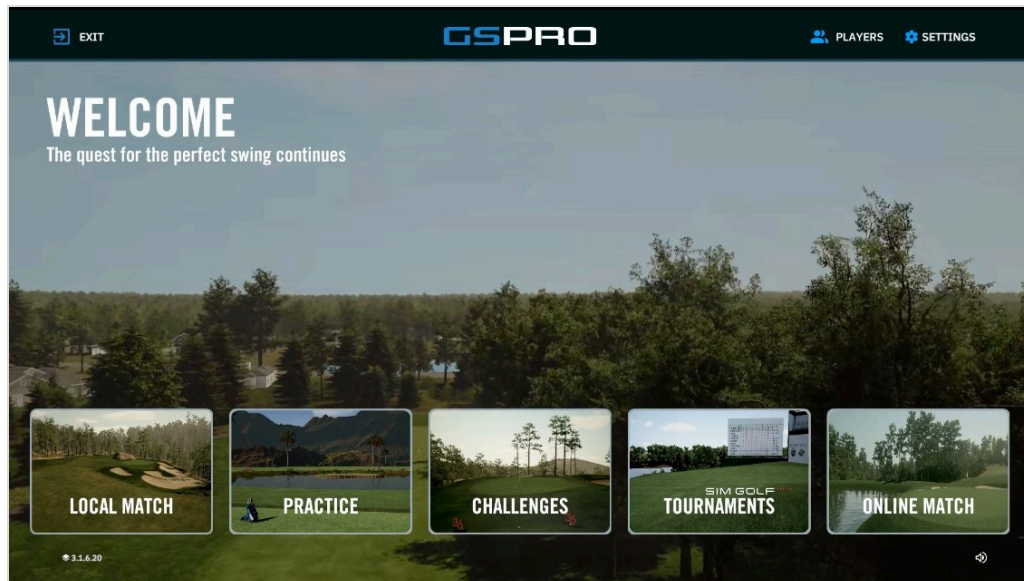


Game Modes

Game Mode – Practice

Practice mode allows you to practice without playing a full game. You have two main options:

- Practice Range
- On Course Practice

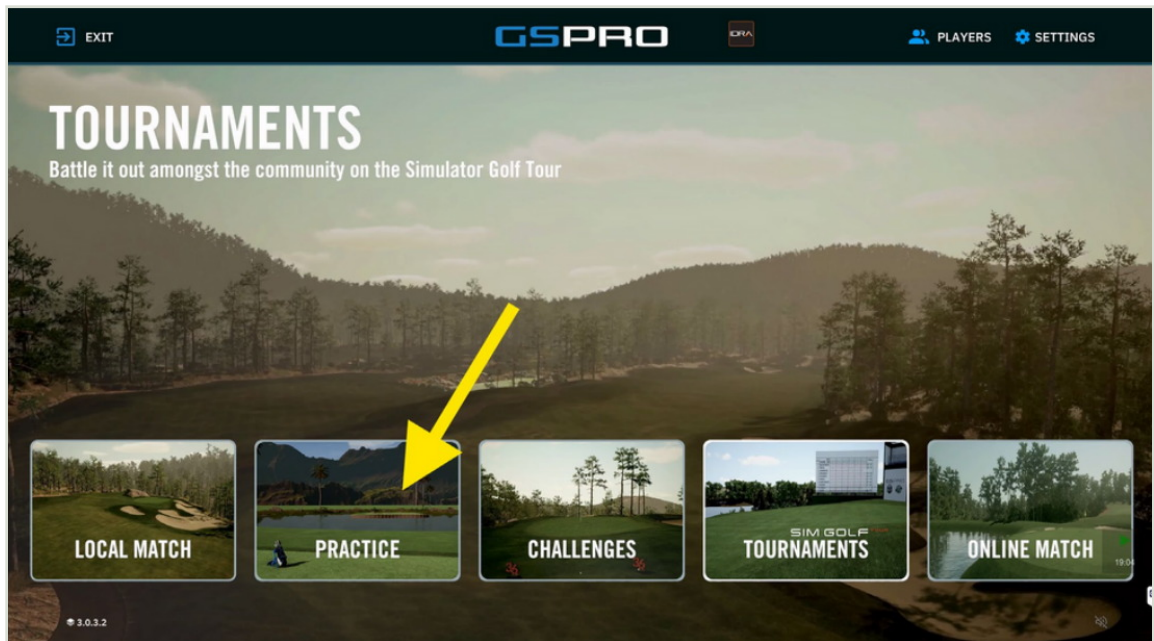

Practice Range

Once **Practice** is selected from the main menu, click on **Practice Range**. You will be automatically transported to the GSPro Practice Range.

No player needs to be selected.

- ✓ You can hit balls freely, at your own pace.



Practice Range

To exit

- 1 Click on the four small dots at the top right of the screen.
- 2 Then click End Round to return to the main menu.




On Course Practice

Once **Practice** is selected in the main menu, you can also click **On Course Practice**.

1

Choose a golf course (Course)



This option allows you to practice on a real course layout.

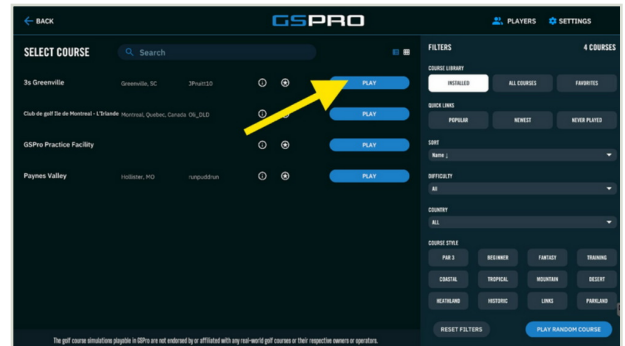

2

Select a specific hole on this course

You can practice shots as if you were on a real course, but in free mode. It works similarly to the Practice Range, but with the setting and layout of a real golf hole.

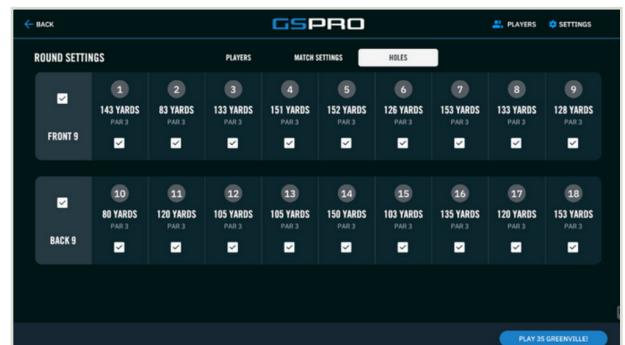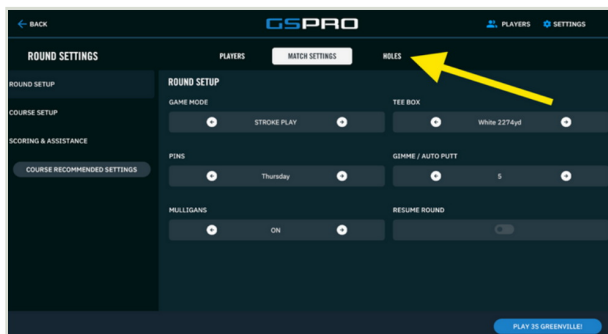

3

Start the game by pressing PLAY in the bottom right corner.

Courses: We have installed the top 100 courses on GSPRO, based on popularity. GSPRO has 2,500+ courses. Select **All Courses** and download one that interests you.


Game Mode – Local Match

To play a full or partial round of golf:

1

From the main menu, select Local Match

This mode allows you to play 18 holes, 9 holes, or a custom number of holes on a specific course.

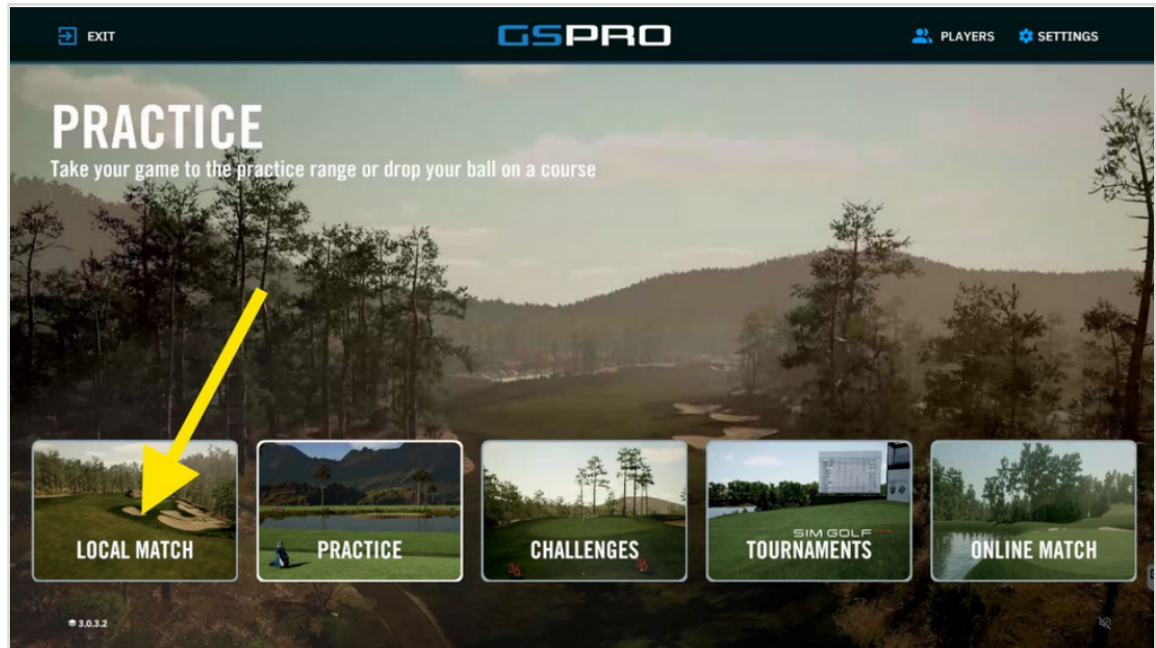

2



Choose a golf course (Course)

A list of courses appears on the screen. Click on a displayed course, or use the search bar to find a specific one.

3

Use the filters on the right of the screen



Installed: displays only the courses already installed. **All Courses:** displays all available courses (requires download).

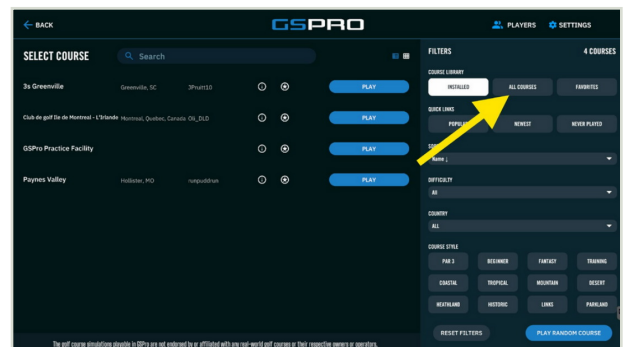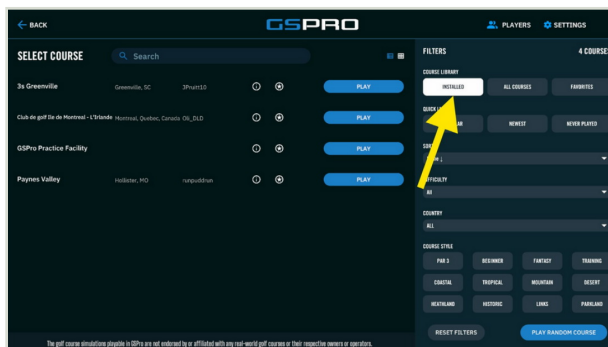

Game Mode – Local Match

More filter options

- **Play Random Course:** launch a random course.
- **Reset Filters:** reset the filters if necessary.

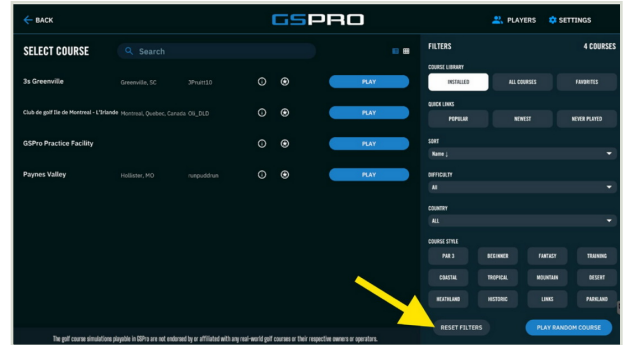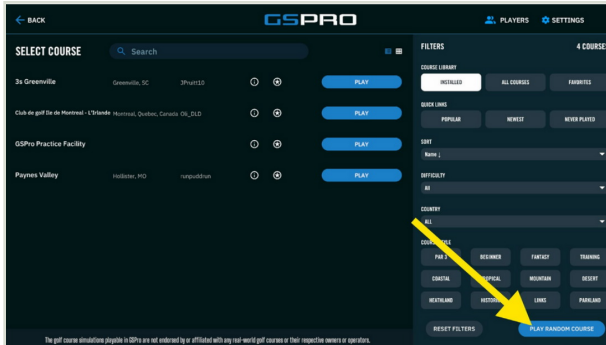

4

Select the desired course

Once found, click **Play** to proceed to game setup.

5


Add or select players

After clicking Play, a screen for player management appears.

Adding Players


If the player already exists

Select it from the drop-down menu.

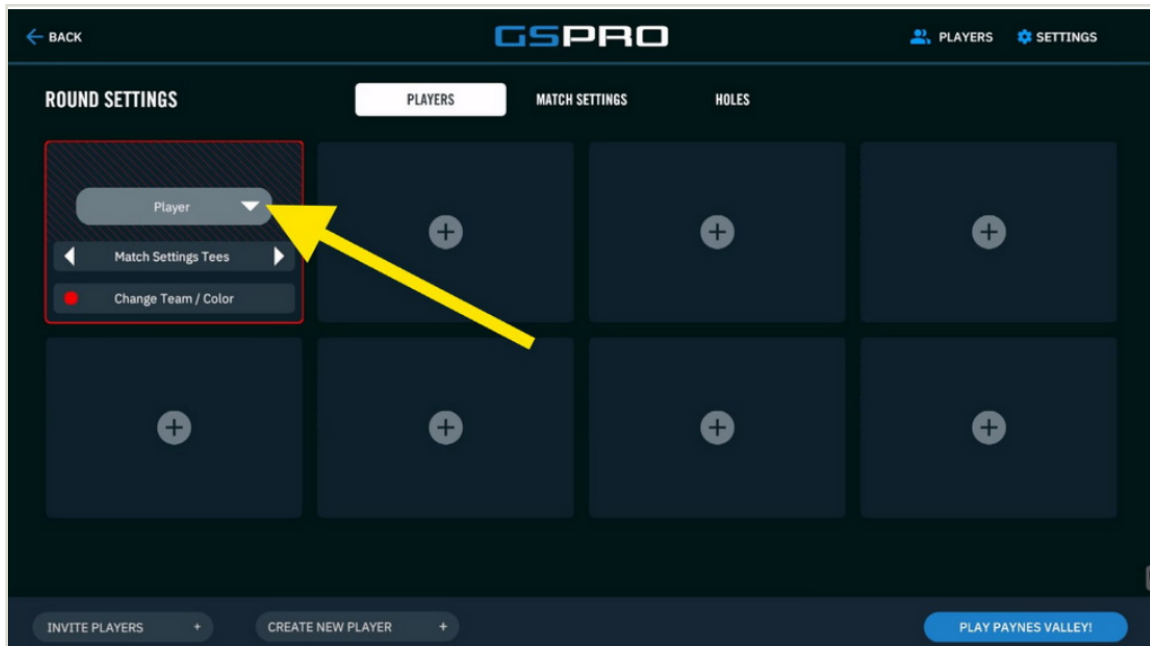

If the player does not already exist

Click **Create Player** at the bottom of the screen, enter a name, select the orientation (Right-Handed / Left-Handed), and save.

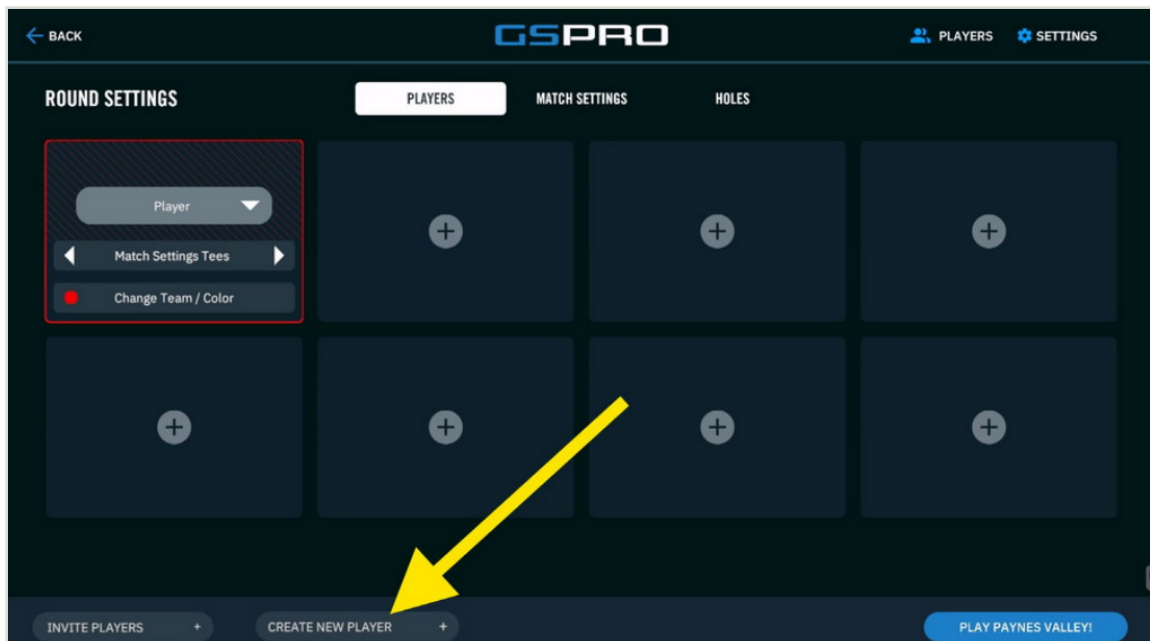


Game Settings

Before starting the game, you can adjust the following settings:


Match Settings

Change the format (Stroke Play, Match Play, etc.), putting mode, tees, weather, etc.

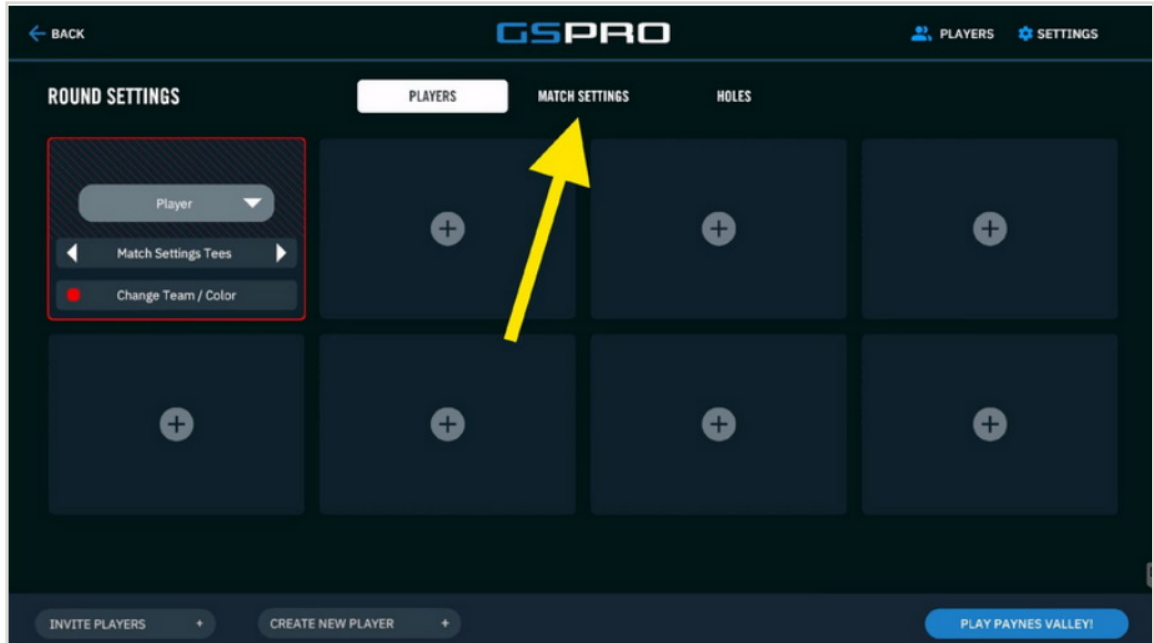

Holes

Choose the holes to play (Front 9, Back 9, All 18, custom holes).

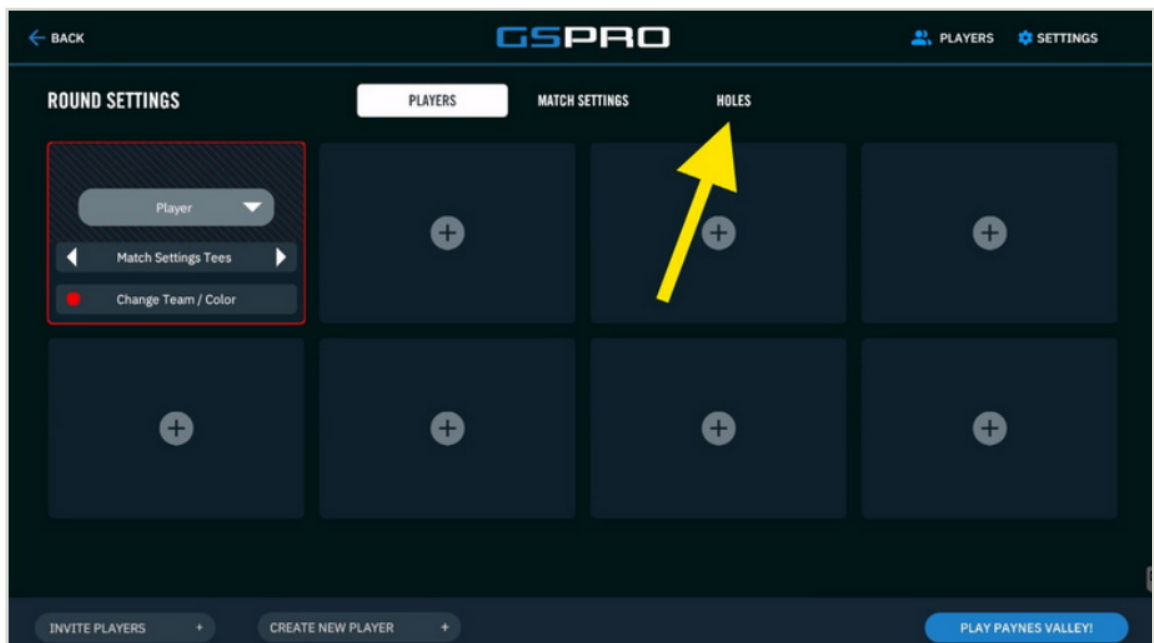

- ✓ Once players are added and settings are complete, click **Play** at the bottom right to start the game.

Ball Ready Strike Zone

When the game has started:

- At the top left of the screen, you will see the name of the active player (the one who must strike).
- Place your ball in the strike zone, the square in the center of the hitting mat (roughly 16 inches across).
 - ✓ **Ball ready:** the arrows on the screen are white. When they turn **green**, the ball is in the strike zone and you can hit.



Exiting GSPro

When you are finished your session, there is nothing to do. The system manager will reset everything for the next group of players.

1

How to quit your current game


Click on the drop-down menu (the four small squares at the top right of the screen). Select **End Round** to exit the match or practice mode.



2

Exiting GSPro

Clicking **Exit** at any point closes the program, and any session info you entered will be lost. Use **End Round** and the **Back** buttons only to return to the main menu. Your player info will be deleted by the system manager at your departure.

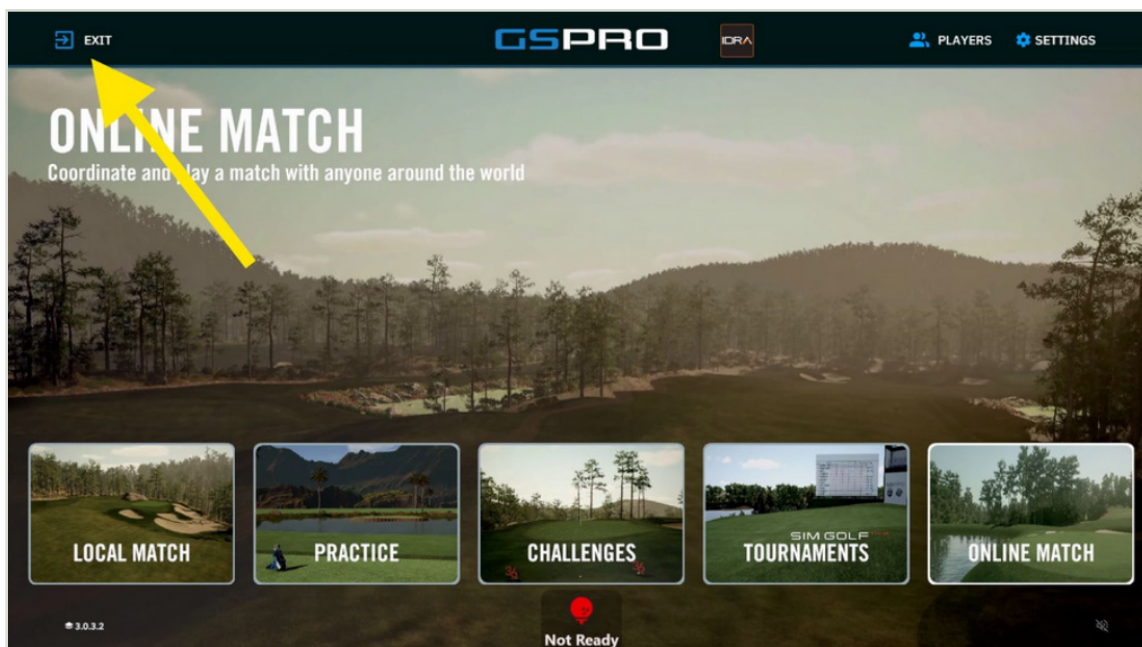

Keyboard Shortcuts

GSPro shortcuts on a standard keyboard. Green keys are GSPro shortcuts. Press **Tab** in GSPro at any time to see the shortcut overlay on screen.

Esc Show UI	F1 Clear Tracer	F2	F3 Aim Point	F4	F5 Free Look	F6	F7	F8 Console Short	F9 Console Tall	F10	F11 Fullscreen	F12		
`	1	2	3	4	5 Cam Go To Ball	6 Cam Fly To Ball	7	8 * Go To Ball	9 * Prev Hole	0 * Next Hole	- Sound Off	= Sound On	Backspace	
Tab Keyboard Toggle	Q Zoom In	W Zoom Out	E	R Range Finder	T Scorecard	Y Heat Map	U Putt Toggle	I Club Up	O Flyover	P Pin Indicator	[	]	\	
Caps	A Reset Aim	S Expand Map	D Vert Dots	F FPS	G Green Grid	H Hide UI	J Shot Cam	K Club Down	L Lighting	;	,	Enter		
Shift	Z 3D Grass	X	C Tee Left	V Tee Right	B Cam Clip	N Switch Hand	M Mulligan (Ctrl)	, Shadow - (Shift)	. Shadow + (Shift)	/	Shift			
Ctrl	Win	Alt	Space Fast Forward				Alt	Win	Menu	Ctrl	↑ Aim Forward	← Aim Left	↓ Aim Back	→ Aim Right

- Keys marked * (8, 9, 0) only work in On Course Practice mode.
- Shortcuts only work while GSPro is the active window. If a key does not work, tap on the GSPro screen first.

 
Most used during a round: **I / K** change club, **U** putter, **Ctrl + M** mulligan, **O** flyover, **Y** heat map, **G** green grid.

Shortcuts by Category

The same shortcuts as the keyboard on page 13, grouped by what they do.


Aim

Aim Left
Aim Right
Aim Forward
Aim Back
Reset Aim
Aim Point
Shot Cam

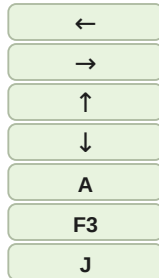


Tee Box

 Tee Left
Tee Right
Switch Hand




Club

 Club Up
Club Down
Putt Toggle

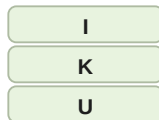

Map

 Zoom In
Zoom Out
Expand Map




View

Flyover
Heat Map
Scorecard
Green Grid
Pin Indicator
Range Finder
Hide UI
Show UI
Clear Tracer




Mulligan

 Mulligan




Camera

 Cam Go To Ball
Cam Fly To Ball
Free Look
Cam Clip

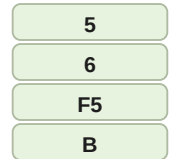

Practice (On Course Practice only)

 Go To Ball
Prev Hole
Next Hole



Visual / System

Vert Dots
Lighting
3D Grass
FPS
Shadow -
Shadow +
Fullscreen
Fast Forward
Sound Off
Sound On
Keyboard Toggle
Console Short
Console Tall

